



MANIFESTATIONS INSTALLATION GUIDE


TOOLS REQUIRED

- Card squeegee
- Soft squeegee (window cleaning)
- Spray bottle
- Tape measure
- Masking tape
- Cloth



DIRECTIONS


- 1 Measure and cut a length of Manifestation to the required panel width.
- 2 Prepare the glass for application by thoroughly cleaning it with a soapy water solution, ensuring all oil, wax and silicone residues are removed.
NB - Take care not to scratch or damage the glass whilst cleaning.
- 3 If glass has been cleaned but left for a while, re-clean using a spray of soapy water and a soft squeegee.
- 4 You may wish to draw temporary markings on the reverse or face of the glass, to indicate where the Manifestations are to be installed. Ensure to use a wipe-clean marker such as a china marker pencil or dry-wipe pen. Measuring the required height from the finished floor level can be ascertained using a tape measure or laser level.
- 5 Re-pressurize the Manifestations to the carrier tape by laying the strip down on a flat surface, and firmly running the card squeegee across the full length of the strip, from the centre to each edge as shown in the diagram below.
- 6 If installing dry, follow the **Dry** instructions. If wet application, follow **Wet** instructions.

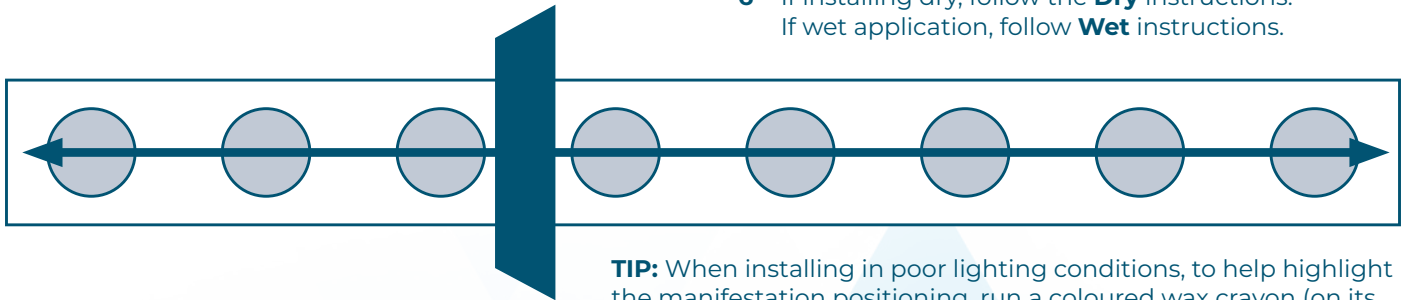

TIP: When installing in poor lighting conditions, to help highlight the manifestation positioning, run a coloured wax crayon (on its side) along the carrier tape surface of the manifestation strip.

DRY

- Position the strip of manifestations on the glass and temporarily fix the top edge of the strip to the glass using pieces of masking tape.
- Using the masking tape as a 'hinge', flap the strip up and carefully remove the backing paper to reveal the adhesive side of the manifestation dots.
- Using the card squeegee, fold down the strip and starting from the centre of the strip, apply each dot with one full firm stroke.
- Leave for 5 to 10 minutes for the manifestations to adhere to the glass. Start to remove the carrier tape from one end, running it flat against the glass (as shown in the diagram below).

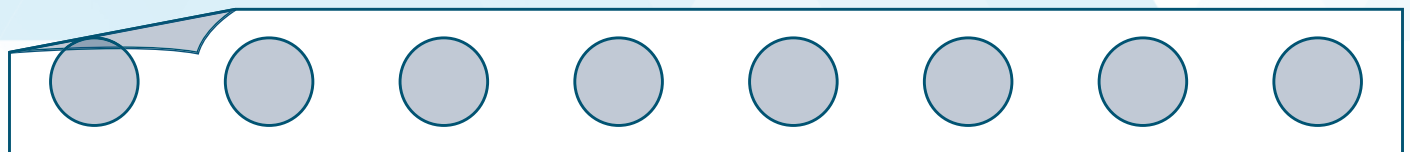

- 7 Once you have removed the carrier tape, ensure all the manifestations – particularly the edges – have adhered to the glass.
- 8 If you need to squeegee the manifestation after you have removed the carrier tape, ensure to wrap a clean cloth or paper towel around your card squeegee when squeegeeing. This also helps to soak away remaining moisture residue where the manifestations have been applied wet.

